



MOUNTING INSTRUCTIONS

2321-0034 ROADLINER SPORTSHIELD MOUNTING KIT - 06

! WARNING

Read and follow these directions carefully.

During installation, make certain that when turning the forks, there can be no interference with wiring or cables AND, that the windshield can not hit the gas tank, through the windshield's full range of adjustment.

This is a quick change kit, ALWAYS tighten all mounting bolts after removing or installing the windshield!

The improper installation of this kit and related components could result in serious injury or death.

Additional tools required that are not included in this kit. 7/16" or 11mm Wrench.

1. Cover gas tank and front fender with towels to avoid damage during installation.
2. Install the windshield mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates. The Santoprene grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lies flat on each side of the plastic. The tabs point in towards the headlight when installed correctly. (see figure 1)
3. Using a 5mm Allen wrench. Locate and remove the two upper Allen head bolts, one on each side of the headlight. Save these bolts to install upper bracket. (see figure 2)
4. Install the right side bracket by placing the support washer into the upper hole "the large part faces out, the small part faces in" followed by the bracket and then loosely re-install one of the upper bolts that was removed earlier. (see figure 2)
5. Locate and remove the two unused bolts in the lower triple tree, one on each side of the headlight and discard. Install the lower screw by inserting one of the new 8mm x 30mm button head screws in this order, through the bracket, through the washer and tighten the lower and upper bolt.
6. Repeat step 5 for the left side bracket. (see figure 2)

7. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (see figure 3 and 4)

8. Adjust the height, angle and alignment of the windshield and tighten *ALL* bolts.

Note: This is a quick change kit, ALWAYS tighten all

CAUTION


IMPORTANT CARE AND CLEANING INSTRUCTIONS

Memphis Shades Windshields and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

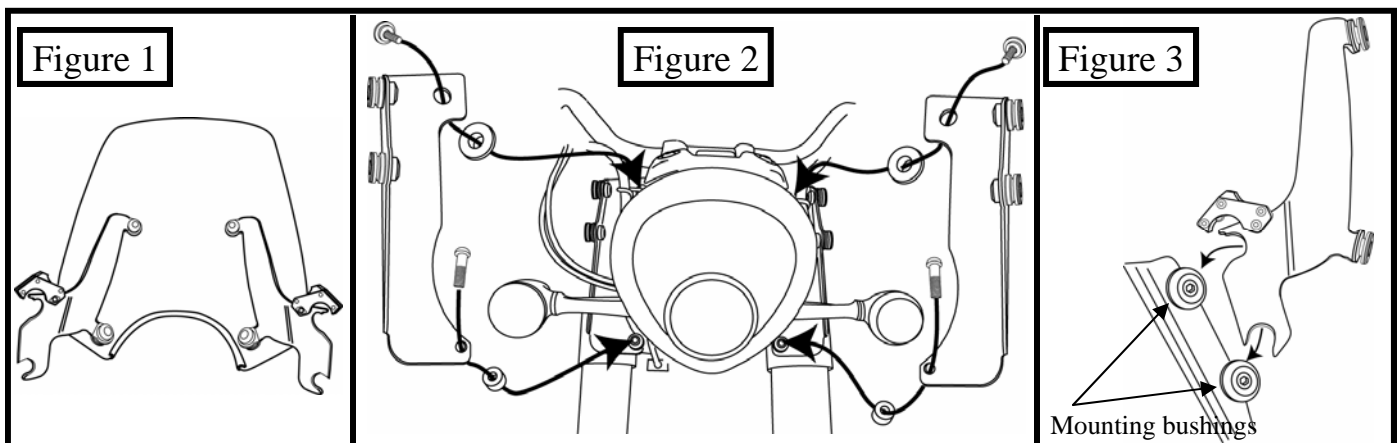



MOUNTING INSTRUCTIONS

2321-0034 ROADLINER SPORTSHIELD MOUNTING KIT - 06

PART #	DESCRIPTION	QTY.
M8911	MOUNTING INSTRUCTIONS	1
M1089	LEFT SPORTS MOUNTING PLATE	1
M1090	RIGHT SPORTS MOUNTING PLATE	1
M1087	LEFT ROADLINER BRACKET	1
M1088	RIGHT ROADLINER BRACKET	1
R318	1" SOCKET SHOULDER WASHER	4
R323	BUSHING ASSEMBLY (2 PART)	4
R324	#207 EPDM O-RING	4
M303	1/4"-20 X 3/4" SOCKET HEAD CAP SCREW	4
M505	BUTTON NUT	8
R321	1" RECESSED SPACER WASHER	4
R319	1/2" SPACER	2

PART #	DESCRIPTION	QTY.
R320	1-1/2" SUPPORT SPACER	2
M366	8mm x 30mm BUTTON HEAD CAP SCREW	2
R322C	CLUTCH SIDE LATCH ASSEMBLY	1
R322T	THROTTLE SIDE LATCH ASSEMBLY	1
R334	6-32 X 3/8" FLAT HEAD SS SCREW	8
R326	SS SPRING	2
M543	SANTOPRENE GROMMET	4
M302	1/4"-20 X 1/2" SOCKET HEAD CAP SCREW	4
M504	SOCKET SHOULDER WASHER	4
R306	5mm LONG ARM ALLEN WRENCH	1
M310	3/16" SHORT ARM ALLEN WRENCH	1
M313	3/16" ALLEN WRENCH COVER	1

Figure 4

