



MOUNTING INSTRUCTIONS

2321-0041 SPORTSHIELD 9" HDLT. DETACHABLE MOUNTING KIT HONDA VTX 1300 S/R (03-07)

! WARNING

Read and follow these directions carefully.

During installation, make certain that when turning the forks, there can be no interference with wiring or cables AND, that the windshield can not hit the gas tank, through the windshield's full range of adjustment.

This is a detachable windshield, **ALWAYS** make sure the Locking Mechanism is Fully Engaged after installing the windshield!

The improper installation of this kit and related components could result in serious injury or death.

Additional tools required that are not included in this kit. 12mm, 8mm Wrench, or 1/4 socket and ratchet.

1. Cover gas tank and front fender with towels to avoid damage during installation.

2. Install the windshield mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates. The Santoprene grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lies flat on each side of the plastic. *Tabs point out towards the edge of the windshield.* (see fig. 1)

3. On the throttle side, locate and loosen, almost to the point of removal, the two 8mm hex head bolts on top of the lower triple tree that secures the chrome fork cover. Locate the cable holder mounted under the upper triple tree. (See Fig. 2) Using a 12mm wrench, remove the cable holder bolt but hold the cable holder in place while slipping the lower mounting bracket slots onto the 8mm Hex Head Bolts. Slip the upper mounting bracket on to the cable holder so that the cable holder is between the upper mounting bracket and the upper triple tree, make sure that the cable holder's locator tab is inserted in the locator hole. and loosely tighten, tighten this bolt after the windshield is in place. (See Fig. 2)

4. Push the lower bracket all the way towards the chrome fork covers and loosely tighten the two lower bolts. Tighten these bolts after the windshield is in place (See Fig. 2)

5. Repeat these steps for the Clutch side.

6. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (see figure 3)

7. Tighten the upper and lower mounting bolts from steps 3 and 4.

8. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

Note: This is a detachable windshield, **ALWAYS** make sure the Locking Mechanism is Fully Engaged after installing the windshield! (see figure 3)

CAUTION

IMPORTANT CARE AND CLEANING INSTRUCTIONS

Memphis Shades Windshields and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

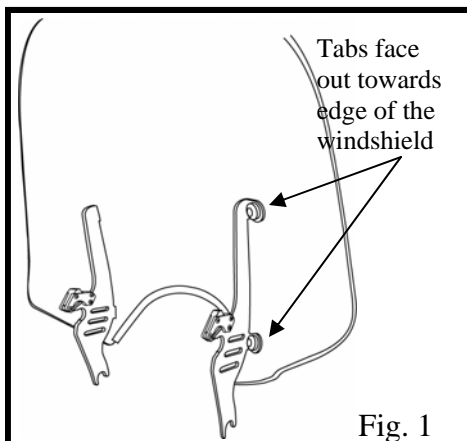


Fig. 1

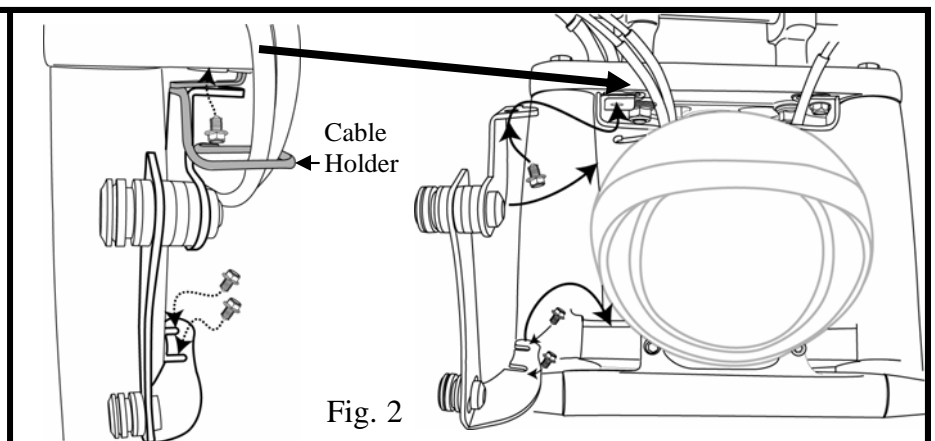


Fig. 2



MOUNTING INSTRUCTIONS

2321-0041 SPORTSHIELD 9" HDLT. DETACHABLE MOUNTING KIT HONDA VTX 1300 S/R (03-07)

PART #	DESCRIPTION	QTY.
M8915	MOUNTING INSTRUCTIONS	1
M1111	LEFT SPORTS PLATE HONDA VTX1300 S/R W/COV FKS	1
M1112	RIGHT SPORTS PLATE HONDA VTX1300 S/R W/COV FKS	1
M1107	LEFT BRACKET HONDA VTX1300 S/R W COV FKS	1
M1108	RIGHT BRACKET HONDA VTX1300 S/R W/COV FKS	1
M1121	LEFT UPPER BRACKET HONDA VTX1300 S/R W/COV FKS	1
M1122	RIGHT UPPER BRACKET HONDA VTX1300 S/R W/COV FKS	1
R323	BUSHING ASSEMBLY (2 PART)	4
R324	#207 EPDM O-RING	4
M303	1/4"-20 X 3/4" SOCKET HEAD CAP SCREW	2
M505	BUTTON NUT	8
R321	1" RECESSED SPACER WASHER	4
R328	1/4"-20" X 1-3/8" SOCKET HEAD CAP SCREW	2
R330	1" INDENTED RECESSED SPACER	2

PART #	DESCRIPTION	QTY.
R322C	CLUTCH SIDE LATCH ASSEMBLY	1
R322T	THROTTLE SIDE LATCH ASSEMBLY	1
R334	6-32 X 3/8" FLAT HEAD SS SCREW	8
R326	SS SPRING	2
R318	1" SOCKET SHOULDER WASHER	4
M543	SANTOPRENE GROMMET	4
M302	1/4"-20 X 1/2" SOCKET HEAD CAP SCREW	4
M504	SOCKET SHOULDER WASHER	4
M310	3/16" SHORT ARM ALLEN WRENCH	1
M313	3/16" ALLEN WRENCH COVER	1
M314	3/16" T-HANDLE ALLEN WRENCH	1
M337	3/16" T-HANDLE ALLEN WRENCH COVER	1

Figure 3

1. Place lower slot into lower bushing.
 2. Rotate top slot into place.
 3. Secure locking Mechanism.
 4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

1. M1111
 2. M1107
 3. M1112
 4. M1108
 5. 1121
 6. 1122

2321-0041 SPORTSHIELD KIT

NOT CORRECT

CORRECT Fully engaged

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:
 MEMPHIS SHADES
 P. O. Box 429
 Rossville, TN 38066
 (901) 853-0293

Visit us on the web at www.memphisshades.com or you can also reach us by email: customerservice@memphisshades.com